


# Pressure/Temperature Recommendations

## P Standard Pure-Flo Valve

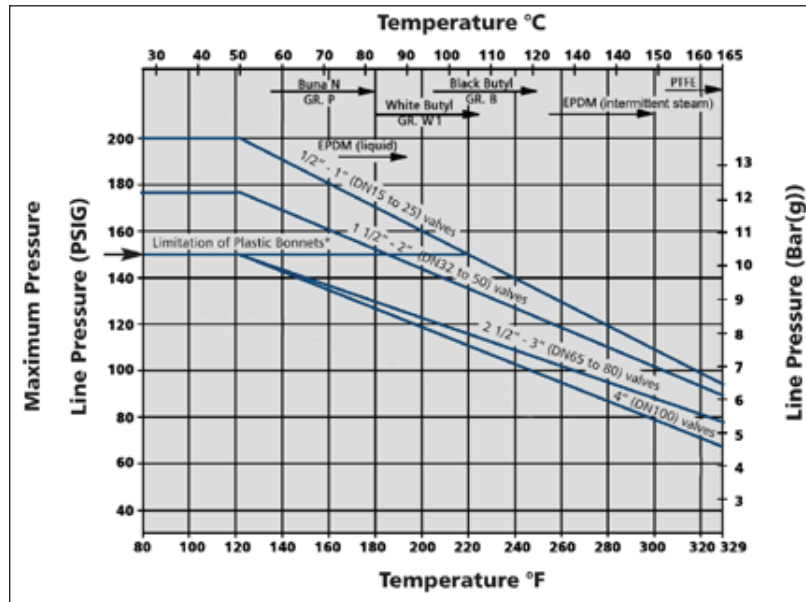

\* This line shows the limitation of plastic bonnets including the 963 and Advantage Actuators.

Note: Elastomer diaphragms may be used in vacuum service within above temperature recommendations. For services exceeding charted pressure/temperature recommendations, consult factory. The chart does not pertain to steam or corrosive services. Consult ITT Dia-Flo Technical Manual and Service Guide for specific recommendations.

## E EnviZion Valve

